


Priesta Deluxe Frameless Series

Shower Enclosures
 Models - S46FD, S58FD
 Height 7'1"

Tub Enclosures
 Model - T58FD
 Height 58"

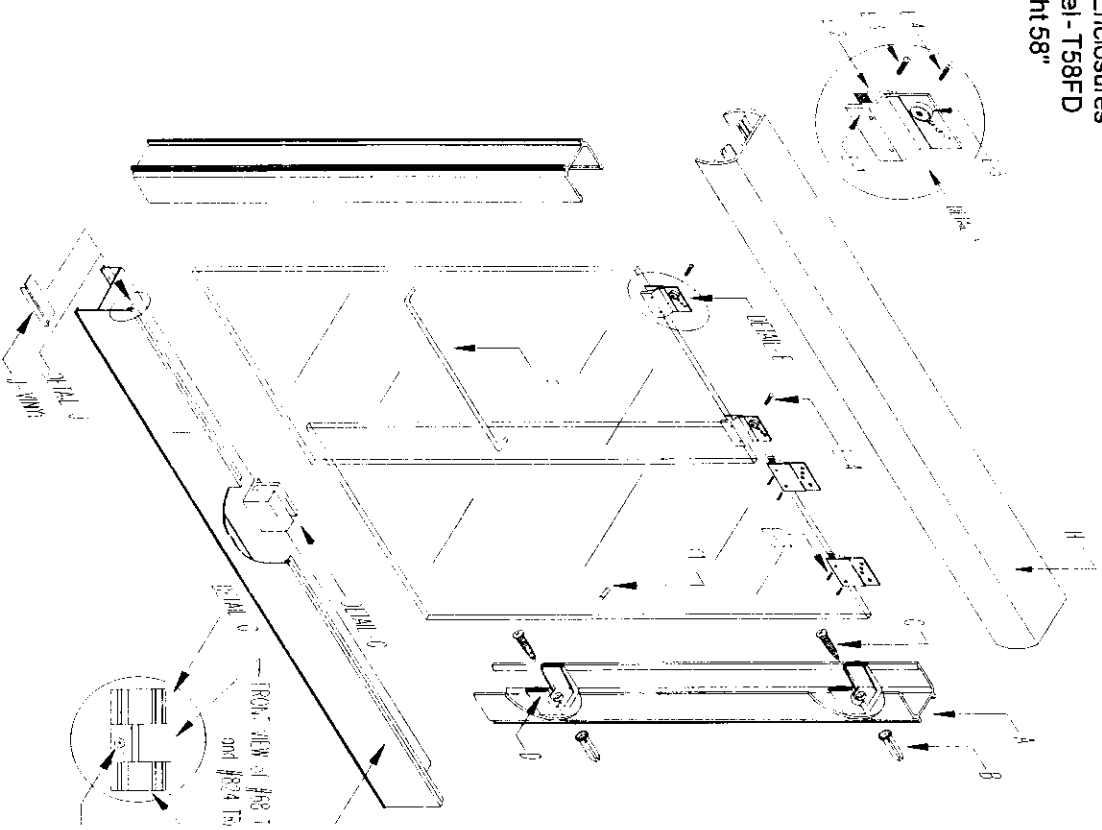

Peterson Industries
 7350 N.W. 37th Avenue, Miami, Florida 33147
 Dade 951-7943, Broward 764-2011, Fla. Toll Free 1-800-432-8549
 National Toll Free 1-800-331-4478, Fax # (305) 693-0754

GLAZED
 INCLUDES
 GLASS OR PLASTIC

KD
 DOES NOT INCLUDE
 GLASS OR PLASTIC

**WHEN ORDERING REPLACEMENT PARTS,
 REFER TO PART # DESCRIPTION & MODEL #**

KEY LETTER	PART #	PART LIST DESCRIPTION	QUAN.
A	605	Wall Jamb	2
B	64	Wall Anchor	4
C	43	Installation screw 8x1 p.h. pan sms.	4
D	69	Bumper	4
E1	822	Glass Bracket	4
E2	823	Glass Bracket	4
E3	51	Glass bracket screw #6x1/2" pan hd.	12
E4	40	Roller screw #8-32x3/8" P.H. Truss hd. SMS.	4
E5	23	Roller	4
F		Towel bar	1
F1		Knob	1
G	68	Track Guide	1
H	801	Header	1
J	87	Track vinyl	1
K	42	Track Guide screw #6x3/8" Pan hd. SMS.	1
L	824	Track	1

TriStar Deluxe Frameless Series


Shower Enclosures
Models - S46FD, S58FD
Height 7'1"

Tub Enclosures
Model - T58FD
Height 58"

Peterson Industries
7350 N.W. 37th Avenue, Miami, Florida 33147
Dade 691-7945, Broward 764-2011, Fla. Toll Free 1-800-432-8649
National Toll Free 1-800-331-4478, Fax # (305) 693-0754

BEWARE

1. When measuring look out for towel bars, electric switches, paper holders, tile obstruction, etc.
2. All measurements to be taken facing the enclosure while standing in the bathroom.
3. Give accurate measurements between all arrows.

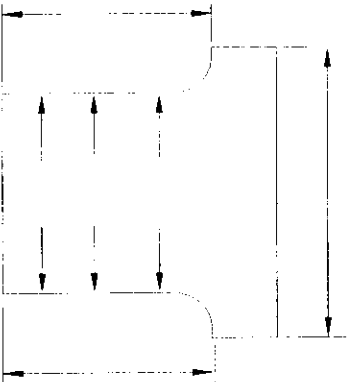

Installation Instructions

- (1) Measure bottom of opening, deduct 1/4" then cut bottom track to size.
- (2) Locate mid-point of track in channel provided, drill 7/16" hole at mid point.
- (3) Apply a bead of caulk to bottom of track and set in place.
- (4) Put one wall jamb in place and mark holes on wall, remove jamb, using a 3/16" masonry bit drill holes in wall. Insert one plastic wall anchor in each hole. Thread a #8x1" installation screw through bumper provided and secure jamb to wall using this assembly. Repeat procedure with other jamb.
- (5) Measure width of opening (wall to wall) above the jambs. Cut header to this size minus 1/8".
- (6) Install header on jambs.
- (7) Install rollers on glass clips using #8-32x1/4" screws.
- (8) Hang panels on header.
- (9) Using #6x3/8" screw attach track guide to track using hole previously drilled.
- (10) Install knob on inside of interior panel.
- (11) Install towel bar on outside panel.