

Manufactured by

BARON SERIES


MODEL 78B

Peterson Industries
Hialeah, Florida 33013-1792

GLAZED INCLUDES INCHES
GLASS OR PLASTIC KD
DOES NOT INCLUDE GLASS OR PLASTIC

SHOWER DOOR & PANEL PLUS RIGHT ANGLE PANEL
FRONT 30" - 40", END TO 36", HEIGHT 70"

NOTE: WHEN INSTALLING HEADER ANGLE BRACKET, INSTALL WITH LETTER D DOWN.

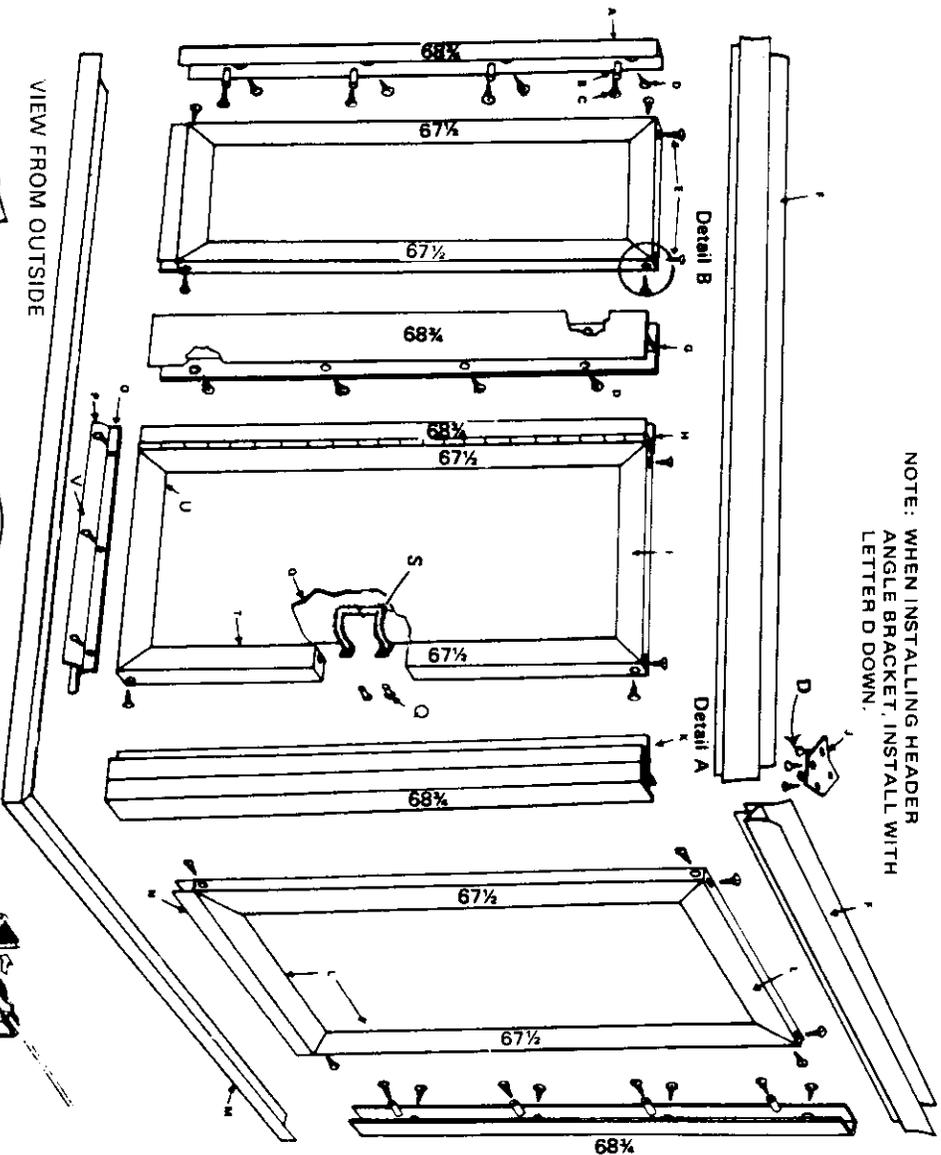

Detail A
Door Adjustment

Detail B
corner assembly

NEW FULL LENGTH
MAGNETIC CATCH

WHEN ORDERING REPLACEMENT PARTS, REFER TO PART NO., DESCRIPTION, MODEL NUMBER AND SIZE

Key Letter	Part No.	PARTS LIST Description	Quan.
A	312	U-Channel	2
B	64	Plastic Wall Anchor	8*
C	43	Installation Screw 8 x 1 P.H. PAN SMS	8*
D	42	Adjustment Screw 6 x 3/8 P.H. PAN SMS	30*
E	41	Assembly Screw 8-32 x 1/2 P.H. FH SMS	24**
F	309	Header	2
G	310	Mullion	1
H	HA-68	Jamb, Hinge, Frame, Assembly+	1
I	103	Top and Bottom Frame (Door)	2
J	21	Header Angle Bracket	1*
K	CPA-78	Corner Post Assembly ●	1
L	103	Top, Bottom & Side Frame (Panel)	8
M	313	Bottom Angle	2
N	103	Panel Bottom Channel (Attached To Bottom Frame)	2
O	308	Drip Pan	1
P	82	Drip Pan Vinyl	1
Q	40	Handle Screw #8-32x3/8 P.H. TR. HD MS	2
R	44	Screw Jacket	2
S	616	Cast Handle	2
T	203	Magnetic Side Frame (Door-Handle Side)	1
U	81	Glazing Vinyl (.156)	40 FT.
V	42	Drip Pan Screw 6 x 3/8 P.H. PAN SMS	3*
W	PIMS	Magnetic Strip	1
X	20	Corner Lock	12**

+ Assembly consists of side frame, hinge and strike jamb stitched together.
 * These items are in Hardware Bag for Glazed and KD Units.
 ** This item will be in Hardware Bag for KD Units Only.
 ● Corner Post Assembly Consists of #314 Corner Post and #611 Strike Jamb.
 NOTE: 33# 42 Screws Furnished. Use as Shown in D. Balance to Secure U-Channel & Header.

BARON SERIES

MODEL 78B

SHOWER DOOR & PANEL PLUS RIGHT ANGLE PANEL
FRONT 30" - 40", END TO 36", HEIGHT 70"

manufactured by

Peterson Industries


BEWARE

1. Door to always be away from Shower head and generally swings out.
2. When measuring look out for towel bars, lavatories, etc. (Anything that would be in the way of the door when it opens.)
3. All measurements to be taken facing the enclosure while standing in the bathroom.
4. Give accurate measurements between all arrows.
5. Show location of panel (left or right). (Same as dotted lines in diagram below.)
6. Give the size of door.


INSTALLATION NOTES

1. Locate Bottom Angle (M). (Cut from end nearest wall if necessary). Cement & install same.
2. Install U-Channels (A) against wall, use 3/16" drill to make holes.
3. Slide fixed panels into positions.
4. Slide 90° Corner post (K) into position.
5. Slide door Jamb over fixed panel.
6. Adjust door to (K) for 3/16" clearance.
7. Cut header (F) to length & install same.
8. Adjust panels & secure same to all surrounding parts including header with code D screw.
9. Install Drip Pan (O) on bottom frame inside of door.
10. Caulk the entire unit inside and out.

Measurements on special units must be center line.

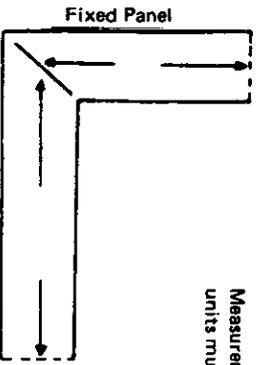

Measurement Chart for
Left Hand Panel

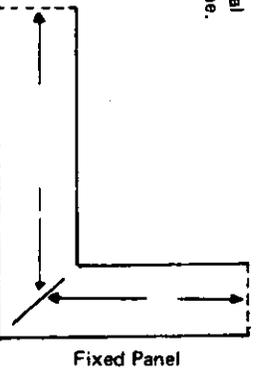

Measurement Chart for
Right Hand Panel