


BARON SERIES

NEO - ANGLE
SHOWER ENCLOSURE

MODEL - 798
Ht. 69 3/4"

Peterson Industries

7350 N.W. 37th Avenue, Miami, Florida 33147
Dade 691-7943, Broward 764-2011, Fla. Toll Free 1-800-432-8549
National Toll Free 1-800-331-4478, Fax # (305) 693-0754

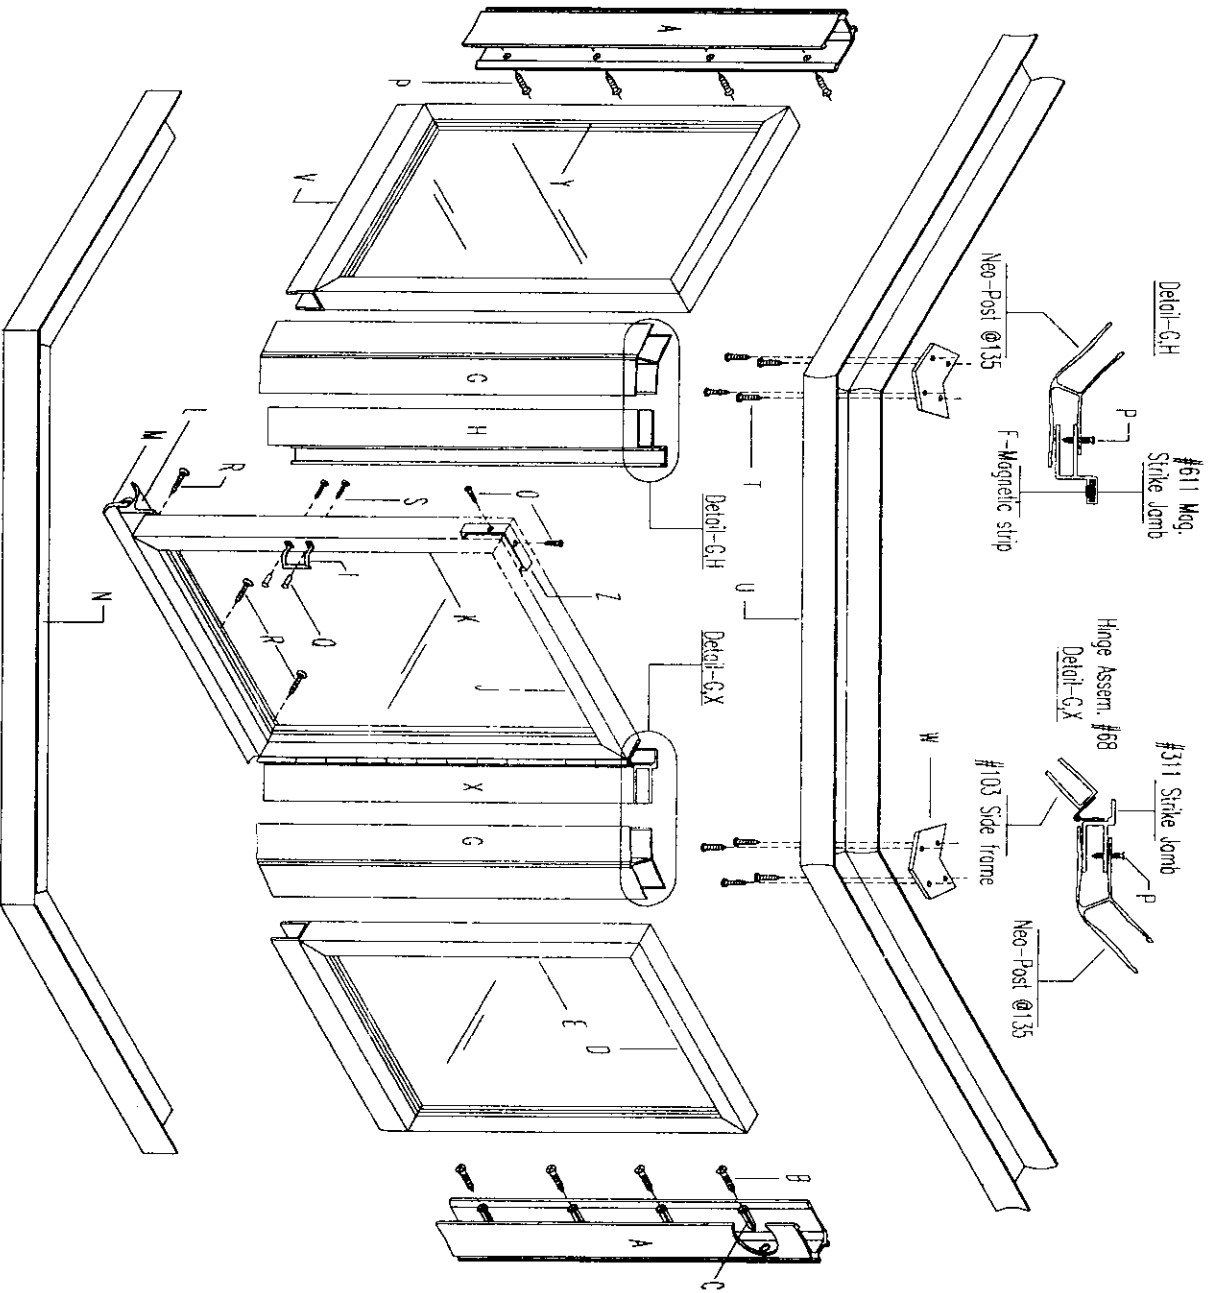

WHEN ORDERING REPLACEMENT PARTS,
REFER TO PART # DESCRIPTION & MODEL #

KEY LETTER	PART #	PART LIST DESCRIPTION	QUAN.
A	312	U-Channel	2
B	43	Installation screw #8x1" Ph. Pan SMS.	8
C	64	Wall anchors	8
D	103	Top & bottom frames (panels)	4
E	103	Side frames (panels)	4
F	91	Magnetic strip	2
G	317	Neo Post notch LTR @ 135°	2
H	311	Magnetic strike jamb	1
I	316	Handle	2
J	103	Top & bottom frames (door)	2
K	203	Magnetic side frame (door)	1
L	308	Drip pan	1
M	82	Drip pan vinyl	1
N	313	Bottom angle	1
O	41	Assm. screw #8-32x1/2" Ph. Fh. SMS.	24
P	42	Adjustment screw #6x3/8" Ph. Pan SMS.	24
Q	44	Screw/jacket	2
R	42	Drip pan screw #6x3/8" Ph. Pan SMS.	3
S	40	Handle screw #8-31x3/8" Ph. truss Hd. Ms.	2
T	42	Header bracket screw #6x3/8" Ph. Pan SMS.	8
U	309	Header	1
V	103	Spacer (panels)	2
W	21-A	Header angle bracket	2
X	701	Strike jamb hinge Assm.	1
Y	80	Glazing vinyl (3/16")	1
Z	20	Corner lock	48ft. 12

GLAZED INCLUDES GLASS or PLASTIC

DOES NOT INCLUDE GLASS or PLASTIC

BARON SERIES

NEO - ANGLE
SHOWER ENCLOSURE


MODEL - 798
Ht. 69 3/4"

Peterson Industries
7350 N.W. 37th Avenue, Miami, Florida 33147
Dade 691-7943, Broward 754-2011, Fla. Toll Free 1-800-432-8549
National Toll Free 1-800-331-4478, Fax # (305) 693-0754

BEWARE

1. When measuring look out for towel bars, electric switches, paper holders, file obstruction, etc.
2. All measurements to taken facing the enclosure while standing in the bathroom.
3. Give accurate measurements between all draws.
4. Show location of each panel and door, right or left hand hinge and whether it swings in or out.

Measurements on special
units must be center line.

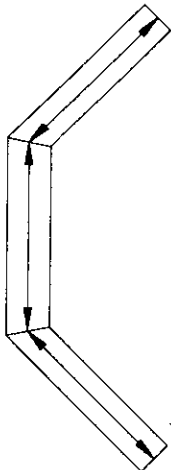

INSTALLATION NOTES

1. Locate bottom angle (N), and cut from the ends nearest wall if necessary to make it fit. Caulk and install.
2. Install U-channels (A) against walls, use 3/16" drill bit to make holes.
3. Slide fixed panels into position.
4. Slide NEO POST (G) into position.
5. Slide door into position, adjust & secure fixed panel on handle side of door having a 3/16" clearance between door and (G).
6. Cut header to length by cutting ends nearest wall and install.
7. Check fixed panels to be certain that they are secured to all surrounding members. Use screw #42.
8. Install drip pan (L) on bottom frame on the inside of door.
9. Caulk entire unit inside & out.